


Quick Start Guide


ZEIM-4000193G A.7 725

Please read this manual thoroughly before use, and keep it handy for future reference

IP67, Vandal- proof Housing And Bracket

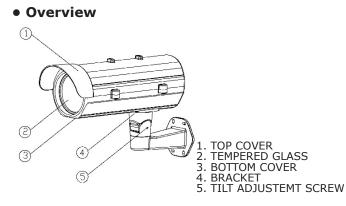


• Connections and setup

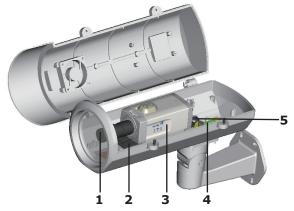


- 1. Lens(Optional)
- 2. Stand : Loose side screws of stand, fix tightly the screws for camera on stand, then fix the side screws after camera is set up
- 3. Camera(Optional): Suitable dimension is less than 210 x 70 x 90 mm
- 4. Heater board: Designed for AC input and remote control function.
- 5. Gland: 3 gland and spacer (in the accessory) could be used selectively. Attention, please lock the 3 glands tightly to ensure waterproof. *Note:*
- 1. Model of AC90-260V does not contain a blower but Model of AC24V does. Model of AC90-260V is equipped with a connector board (refer to figure right) instead of heater board connection for Model of AC24V
- 2. For camera of DC12V only, additional adaptor is suggested.

Dimension

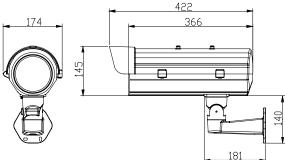

The values are in millimeters.


Heater board Connection

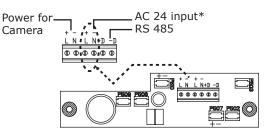


* AC 24V input: automatically power heater and fan. Heater and fan are enabled by temperature.

Connector board Connection (approximate board is provided for Using the second secon

  (connector board is provided for Hi voltage AC90~260V)





Arecont Vision reserves the right to change products or specifications without notice ©2008 Arecont Vision