


# Omni 3 Flush Mount Adapter Installation Instructions

## Step 1.


While aligning the pilot pin on the bracket assembly to the hole on the housing base plate, fasten the bracket assembly to the housing using (4) 8-32 UNC X 1/4" long screws.

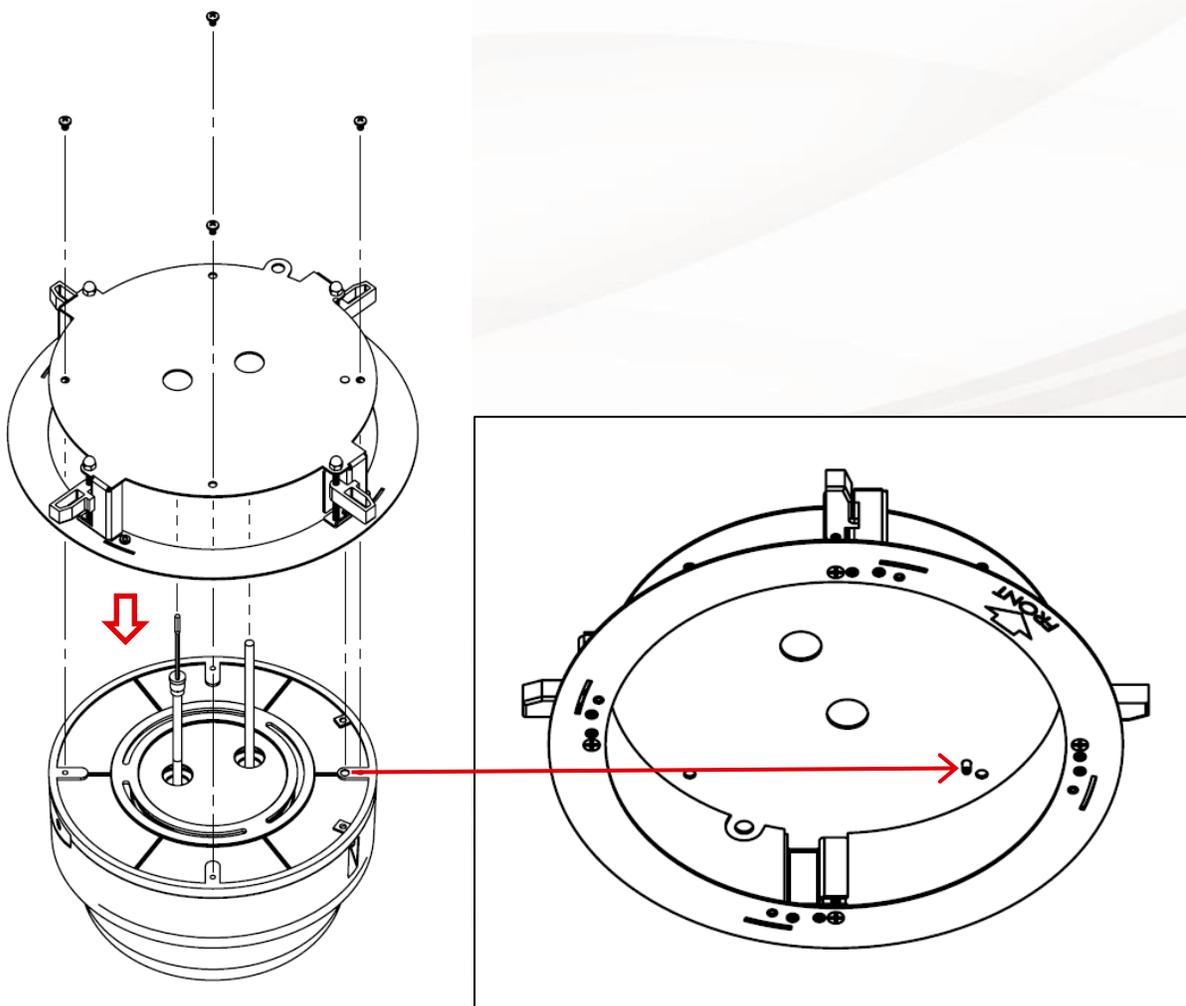


(Continued on next page)

**Step 2.**

Using the Flush Mount Adapter Template cut a 10-1/4" [260mm] diameter hole in the ceiling at the desired location of the camera system.

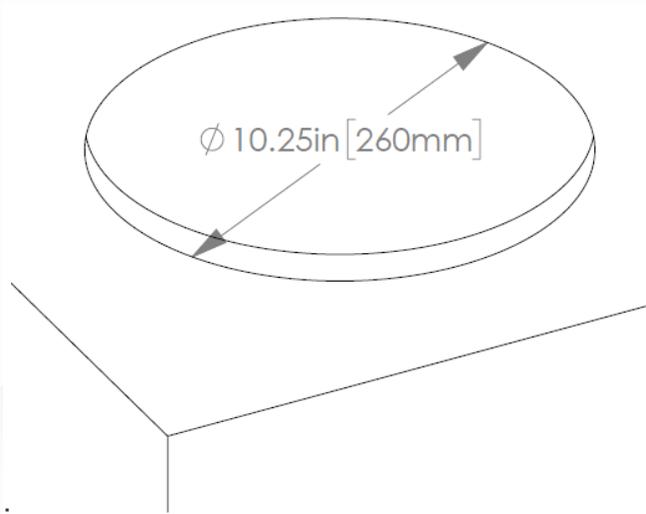**Step 3.**


**For porous low strength, low density ceilings such as suspended ceiling panels, a backing ring must be installed to support the camera weight.** Coil backing ring through hole so it rests flat on the top surface of the ceiling.

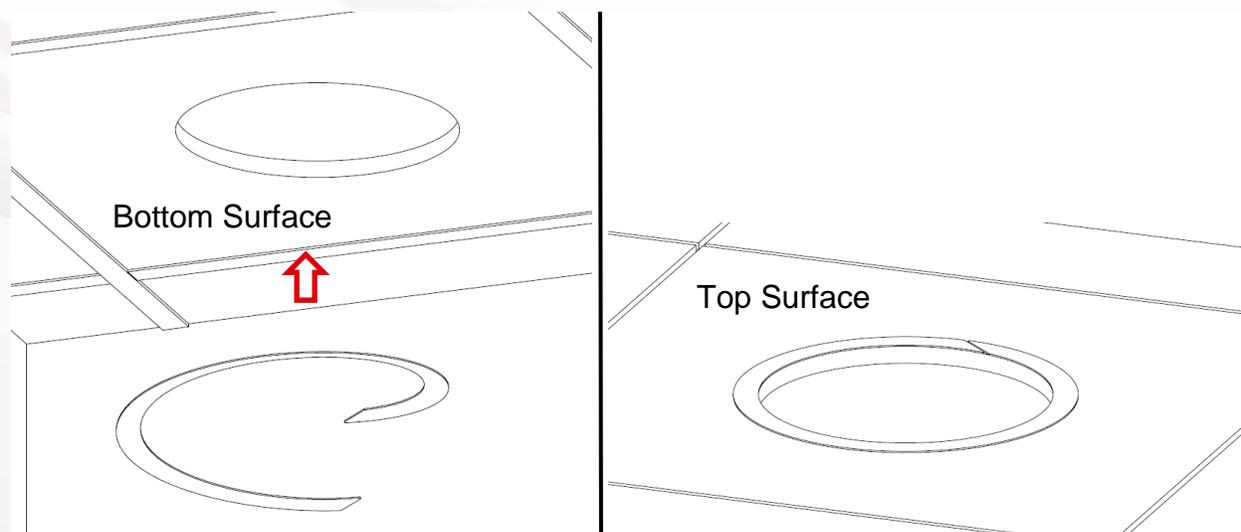

(Continued on next page)


**Step 4.**

Turn the (4) 8-32 UNC X 2-3/8" long screws on the flush mount adapter counterclockwise until the support wings on the flush mount adapter retracts inward (against the housing) AND the distance between top surface of the flush mount adapter ring and each support wing is greater than the thickness of the panel into which the system is being installed.

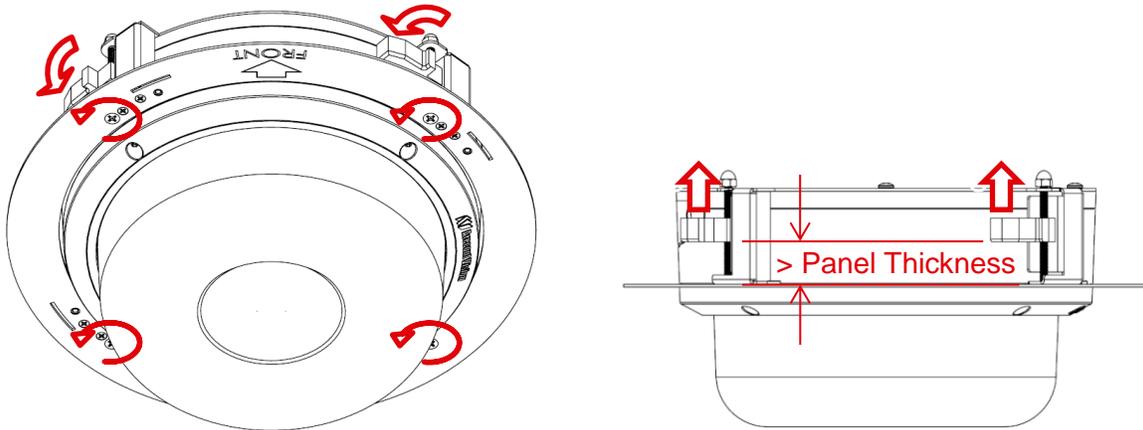**Step 5.**

**To insure safety during earthquake, a structurally attached safety cable must be used.**


Fasten safety cable to hole in flush mount adapter. (Cable not supplied.)

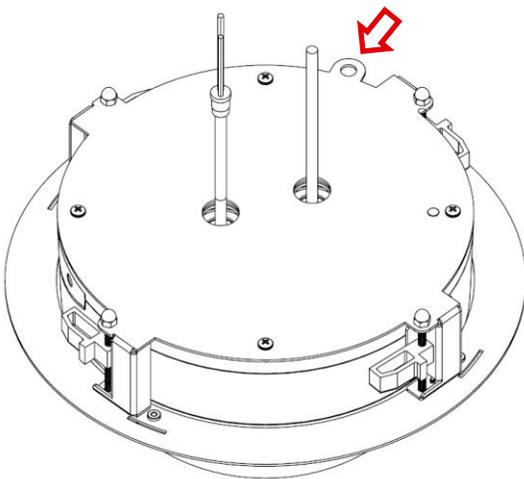

(Continued on next page)

**Step 6.**


While orienting the camera such that the arrow, denoting the front of the camera, is pointing towards the center of the desired camera view area, insert the housing and flush mount adapter into the ceiling and turn the (4) 8-32 UNC X 2-3/8" long screws clockwise until support wings pivot outward and clamp against back of ceiling.

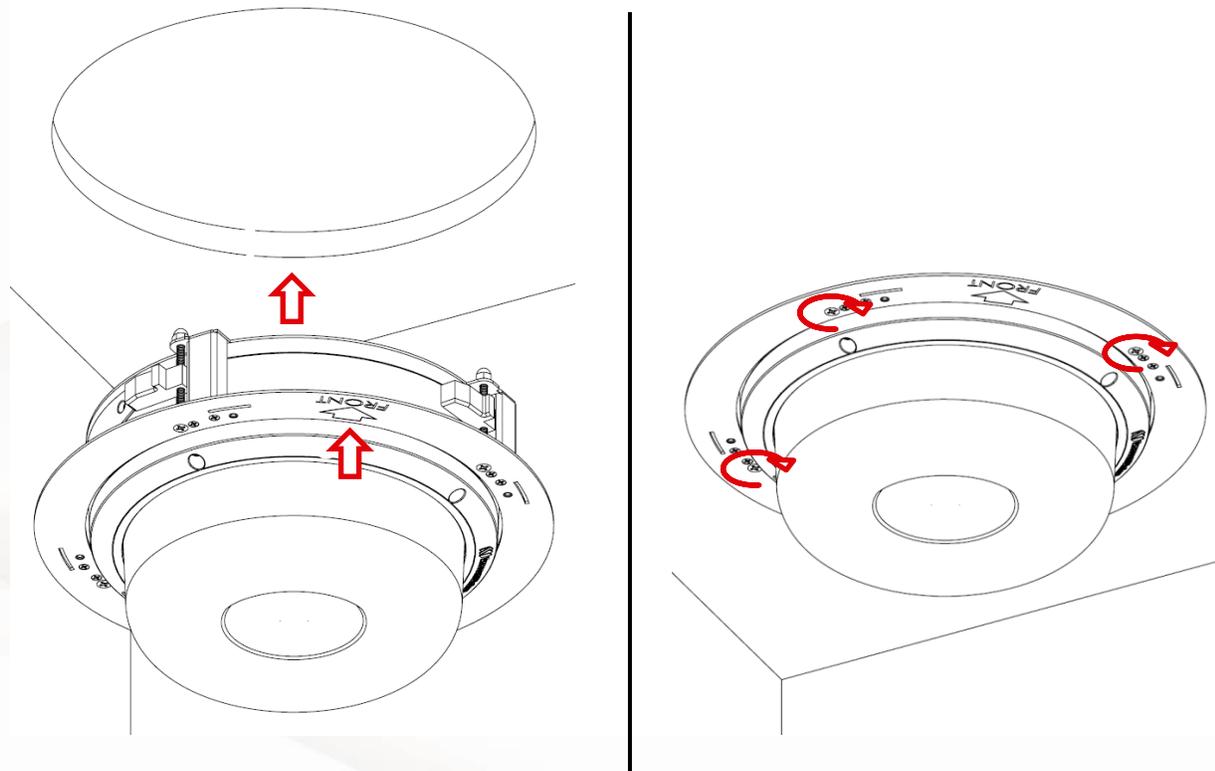

(Continued on next page)

## Step 7.

Lift cover ring up to housing and slowly turn it in either direction until cover ring clicks into place. (At that point, the captive fasteners in the cover ring will be aligned with the threaded holes in the flush mount adapter.)

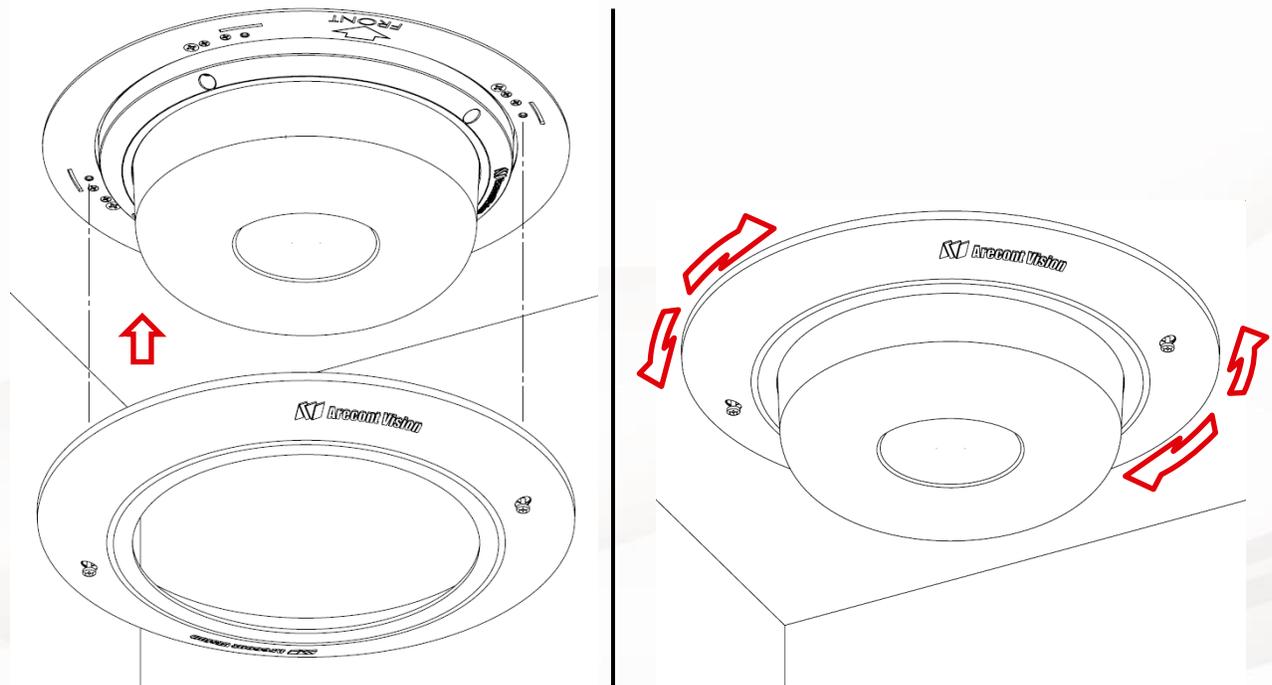

## Step 8.

Secure the cover ring to the flush mount adapter by tightening (2) captive fasteners. Installation complete!

